



EN CityTone Lite



Colorovo

CityTone Lite

Smartphone

* - functionality available depending on the model.





Device User Guide

Thank you for your purchase of the Colorovo CityTone Lite Smartphone. We are sure that it will meet your expectations. Before using the device please read the following instructions.

Safety information

- Please adhere to these instructions and the markings on the device.
- Use this product only for its intended purpose.
- Do not store or use in extremely low or high temperatures (i.e. -0°C /+40°C).
- Do not leave the Smartphone in a car for a long time.
- Do not store or use in high dust conditions.
- Do not store or use in high humidity conditions.
- Do not store or use near naked flames.
- Protect the device from direct sunlight.
- Protect the device from contact with liquids (e.g. water).
- Protect the device from impact, falls and stress.
- Protect the device from strong electromagnetic radiation and electrostatic discharges.
- Do not connect the device to the power supply with wet hands. This can lead to damage, electric shock, short circuit or cause a fire.
- Do not operate the device with wet hands. This can lead to damage, electric shock, short circuit or cause a fire.
- Do not operate the device while driving. This may lead to traffic hazards, and is illegal in many countries.
- Observe restrictions on the use of electronic and radio devices.
- Do not install in a confined space (e.g. by building it in). Provide device ventilation.
- The device should be disposed of in accordance with environmental regulations.
- The charger can only work with a properly functioning electrical system (230V ~50Hz).
- Device charger is a Class II double insulated product with no external grounding.
- During data transmission, do not disconnect the device from the computer or storage media.
- Regularly back up your data.
- Immediately unplug any device which is operating incorrectly or damaged, and send it to the guarantor's service.





- Do not make repairs or modifications to the device and its accessories.
- The guarantor is not liable for damage or loss of data.

 
Hearing protection information

- This device complies with the applicable rules for consumer audio devices on the limitation of output volume to a safe level.
- Listening to the device at high volume through headphones or earphones may cause permanent damage to your hearing.
- Even if you are accustomed to listening to sound at high volume and the level of it seems to be normal, this does not exclude the risk of hearing damage. Turn down the volume to a reasonable level to avoid permanent damage to your hearing.
- In case of an impression of „ringing“ in the ears, immediately turn down the volume or turn off the device.
- The device's sound has been tested by connecting the headphones attached to it.
- To protect your hearing, use only the following headphone types: headphones that meet the requirements of applicable laws. Other types of headphones can generate a higher level of sound (protracted listening to sound at maximum volume can damage your hearing).
- Sounds can affect your sense of direction.
- Do not use the device while driving. This may lead to traffic hazards, and is illegal in many countries.
- Be very careful when using the device in hazardous situations resulting from limited hearing ability, or temporarily discontinue device use.
- If headphones have an „open“ construction (i.e. allow ambient sound reception), do not turn up the volume so that sound from the headphones drowns out the sounds of the environment.
- The „comfortable hearing“ level adapts over time to a greater volume. The sound level, which appears „normal“ to the user can actually be very high and can be harmful to your hearing. Protect yourself against this phenomenon by setting a safe volume level before your hearing adapts to the volume.

To set a safe volume level:

1. Play the sound at low volume.
2. Slowly raise the volume to a level at which the sound can be heard clearly, without distortion, and is not disruptive.

This is a comfortable volume and should not be changed.

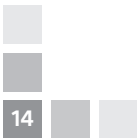



Descriptions of safety symbols



The lightning flash inside a triangle alerts the user to the presence of dangerous uninsulated voltage inside the product, which may constitute a risk of electric shock.

To reduce the risk of electric shock, do not remove the cover (back) of the device, because the housing does not contain user-serviceable parts. Servicing should be entrusted to qualified personnel.



The exclamation mark inside a triangle alerts the user to the presence of important operating and maintenance instructions in the documentation accompanying the product.



Proper disposal of this product. The device cannot be disposed of together with household waste. To prevent potential threats to the environment and human health due to improper disposal of waste, it is mandatory to take used electronic equipment to a designated collection point, or to the place where the product was purchased for the purpose of recycling electronic waste.



A CE Declaration of Conformity is available at the registered office ABC Data S.A., 14 Daniszewska Street, 03-230 Warsaw, Poland and on the product's sub-page at http://www.colorovo.eu/smartphones-en.html?product_id=2889 in the tab „Downloads”. This applies to countries where the use of the product is not subject to any restrictions: Austria, Belgium, Denmark, Finland, Greece, Spain, the Netherlands, Ireland, Iceland, Luxembourg, Norway, Portugal, the United Kingdom, Italy and Sweden.



RoHS. The components used in the device ensure its compliance with the requirements for reducing the use of certain substances which may adversely affect the environment in electrical and electronic equipment (RoHS Directive 2002/95/EC).

Legal information

Copyright © 2012–2014 ABC Data S.A. All rights reserved.

 
Colorovo and CityTone are registered and legally protected trademarks, the use of which in any way without ABC Data S.A. permission is forbidden.

Android is a trademark of Google Inc.

All registered names and trademarks mentioned on the device, packaging and accompanying materials are used only for identification and are the property of their respective owners.

The guarantor is not liable for loss of data or other damages arising in any way from the use of the CityTone Lite Smartphone.

Third-party software supplied with the CityTone Lite Smartphone may be developed by entities unrelated to the Guarantor and may be owned by those entities. The guarantor is not liable for the software.

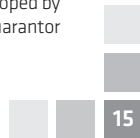



This user guide is not covered by the warranty, and the appearance and/or functionality of the software installed on the device may be different from the one described. The Guarantor reserves the right to modify the user guide at any time without prior notice.

Safety precautions

Please read and follow these concise rules carefully to prevent danger or breaking laws.

Driving safety

Do not use mobile phone when driving. Use the hands-free accessories if you have to use the phone. Put the mobile phone in the holder, instead of the passenger seat or any place that the phone will fall off.

Restricted areas

Please switch off you mobile phone: before boarding, near medical equipment, at gas station or places near fuels and chemicals, in or near operation area of explosion.

Professional service

Only qualified maintenance personnel can install or maintain this mobile phone.

Accessories and battery

Use manufacturer approved accessories and batteries only.

Emergency call

Some networks accept calls to emergency numbers without a valid SIM card. Make sure that the mobile phone is switched on and in service area, enter the emergency number (e.g. 110) and press the Call key to call the number.

Note: Like other mobile phones, the characteristics of this phone may be not supported because of the network coverage or wireless signals transmission. Certain networks even don't support emergency call. Therefore, do not depend on mobile phone only for very important communication (e.g. medical emergency). Please consult your local network operator.

Package contents

- Colorovo CityTone Lite Smartphone
- Charger 100-240V 50-60Hz/ 5V 1A
- Cable USB-microUSB
- Manual guide



About the phone

Status icons

Icons might be displayed on screen.



Time display



Alarm



Battery



Signal



Wifi



Bluetooth



Music



Message



Downloading



Downloaded



Call



Missed call



USB



Limited access


Keys functions

Keys	Functions
Screen home key	Return to the main screen interface;
Side keys	Adjust the volume levels.
Power key	Press this key to lock screen;
	Long press this key to select silent mode/airplane mode/switch off.
	Long press this key to power on the phone when it is off.
Menu key	Open menus in different interface.
Back key	Press this key to go back to last interface.

Getting Started

First Call

 1. Insert the SIM cards (switch off the phone at first). For detailed installation guide, please refer to "Installing the SIM card".
2. Charge the battery. Refer to "Battery and charging".
3. Press and hold the Power key to switch on the mobile phone.

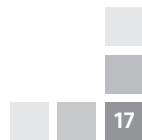



4. Enter area code and telephone number in the dial interface and then press the call key to dial out by SIM1 or SIM2.

Note: Before using the mobile phone, please insert valid SIM cards and charge the battery.

Installing SIM Card

If the SIM card is invalid or damaged, the phone displays "Insert SIM card". Please contact your network operator.

2 SIM card slots are located under the telephone's back case. Switch off the device, remove the back case (in a designated place), remove the battery, take out the SIM card (if it is in the device), and then re-insert it into the slot properly, insert the battery, close the back case.

Warning: Do not bend or scratch the SIM card, or contact static, dust or water; if the SIM card is lost, please contact your network operator. Please switch off the mobile phone before installing the SIM card.

Note: The SIM card is tiny. Please keep it away from children to avoid swallowed

Installing memory card

Make sure that your device is powered off. Remove the back case, locate the memory card slot. Insert the memory card into the appropriate memory card slot. Close the back case.

Note: SD card is tiny. Please keep it away from children. Please select qualified SD cards, such as SANDISK, V-DATA, and Transcend. Please match with the mobile phone when you purchase the card.

Battery and charging

The battery

Only use qualified battery and accessories. When the battery isn't used, put it in the protective case.

Turn off the device before removing the battery

Note: Please operate according to the instructions to avoid damaging the battery contact.





Charging the battery

The new battery will reach its optimized performance after complete charging and discharging for several times.

Please charge in time when the battery voltage is low. Over discharging will damage the battery. Disconnect the charger from the AC power supply and the mobile phone after charging. While charging, the battery status icon flashes from right to left, and stops flashing after charging. It is normal that the battery becomes warm in the charging process.

Battery status

Your mobile phone can monitor and display the battery status.

1. You can check the battery status from the icon in the upper right corner of the screen.
2. If the electricity is insufficient, the “Low Battery” prompt shows up. The mobile phone sends warning tone if the “System alert” in Profiles is activated.
3. During charging, the icon of battery status blinks until the charging completes.

Note: The actual standby time and call time depend on the operation, local network, and settings of the SIM card and mobile phone.

 
Using battery

The performance of the battery is affected by various factors, including wireless network settings, signal intensity, environment temperature, the function or settings that you select, accessories and the mode of voice, data or other applications that you select.

To keep the battery in optimum performance, please follow the rules below:

- The charging of new battery or batteries which haven't been used for long time may be longer;
- Keep the battery in room temperature when it is being charged;
- It is normal that the charging time becomes longer after long time using. If the call time becomes shorter and charging time becomes longer after normal charging, you need to change a qualified battery. Unqualified battery may damage your phone and cause danger.
- If the battery is left unused for too long time or the battery voltage is too low, it takes certain period of time to display the charging interface normally when the charger is connected.

Note: To protect your safety and the environment, do not dispose the battery randomly.

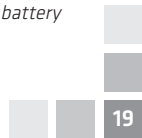



Warning: The short circuit of battery may cause explosion, fire or body hurt.

 
Precautions of using battery

- Switch off the phone before removing the battery.
- Use the battery carefully. It will cause short circuit to connect the anode (+) and cathode (-) of the battery with metal objects (coin, clip, etc.), and damage the battery and metal objects. When the battery is removed and put in the bag, do not contact the anode and cathode of the battery with metal objects (e.g. keys).
- Do not put the battery in fire, or use in any place with high temperature.
- Do not disassemble or refit the battery.
- Do not put the battery in the place with strong mechanical impact or break through with hard object.
- Store the battery in cool and dry place, and avoid high temperature (> 60°C) and direct sunlight.
- Stop using if there is any particular smell or overheating.
- Stop using the battery if there is any crack, distortion or electrolyte leakage.
- If the electrolyte stains the skin or clothes, please wash with soap and clean water immediately; the electrolyte enters the eyes, wash with clean water immediately and go to see the doctor.
- Do not use the battery in low temperature, in which the battery can't get the maximum standby/call time.
- Do not wash the battery with water or organic solvent, or put it in water.
- Fully charge the battery if it won't be used for a long time.
- You are recommended to return wasted batteries to the manufacturer of mobile phone or put them in the specified public recovery area of wasted batteries. Do not put them together with other garbage or dispose casually.

Switching on/off

Press and hold the Power key to switch on the device. The screen shows the power on video.

- Access to main screen interface.
- Press and hold the Power key to select switching off the device.

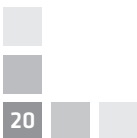



Keypad lock

When the keypad is locked, the mobile phone will be locked automatically if there is no operation in certain period of time. To unlock: Press the Power key

Note: When the keypad is locked, it will be invalid. If there is new call, you can answer as usual, and the mobile phone will resume the locked status after the call.

Calling

Making Calls

Enter area code and phone number and press call key to dial out by SIM1/SIM2.

To make an international call press * key for twice and sign "+" will come out. Then enter country code, area code and phone number (without a zero in front of mobile phone number) in the dial interface. Then press call key to dial out.

Receiving Calls

To receive an incoming call, you can slide the slider to choose "answer".

Rejecting Calls

To reject an incoming call, you can slide the slider to choose "reject".

Emergency call

You can always make emergency call when you are in the coverage area of the network. If you are located in a service area of the network, emergency calls can also be made without a SIM card.

